




# Fantasy Sports Machine

## Loading Receipt Paper

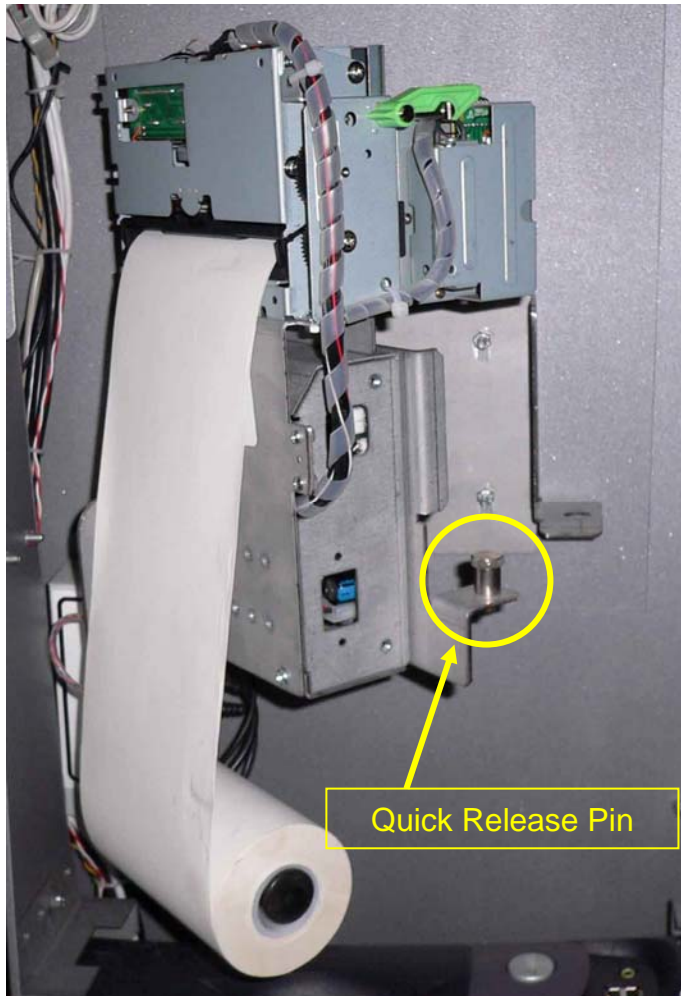

1. Lift quick release pin on right side to printer to swing printer outward. This will allow enough clearance needed to remove old core and add new roll.
2. Remove old core and add roll with paper feeding from bottom of roll up. If there is still paper on the old roll or to clear a paper jam swing the printer out and unlock the green latches on the top of the printer. You will then need to push the presenter release on the left hand side of the printer (not shown). This will allow the presenter to flop open and then can be cleared of any debris.
3. Swing printer back to original position until pin clicks into place.
4. Insert paper into paper feed making sure receipt paper has somewhat of an even tear. Printer should automatically grab paper. If paper does not auto-feed turn off printer by using power toggle switch located directly under paper feed (square cut-out in sheet metal)

*For receipt paper ordering information or technical support please contact MJM Sports at 866-680-1800 or email us at [support@mjmssports.com](mailto:support@mjmssports.com)*